



# CISCO AIRONET 340 SERIES ACCESS POINT AND PC CARD CLIENT ADAPTER REVIEWER'S GUIDE

# Quick Start Instructions for Access Point and PC Card Client Adapter

## Introduction

This guide provides instructions for setting up a simple wireless network and provides background information on wireless LANs and the development of Cisco's wireless products.

For the wireless LAN to operate with maximum range and throughput, the equipment must be correctly installed and configured. The step-by-step instructions in this guide are suitable for most office environments. If your wired network or your computer equipment presents special challenges, however, you may need to consult your Network System Administrator. You can also contact a Cisco representative for assistance by calling 800-553-2447 (outside USA, call 408-526-7209), or by sending e-mail to [tac@cisco.com](mailto:tac@cisco.com).

## Unpack


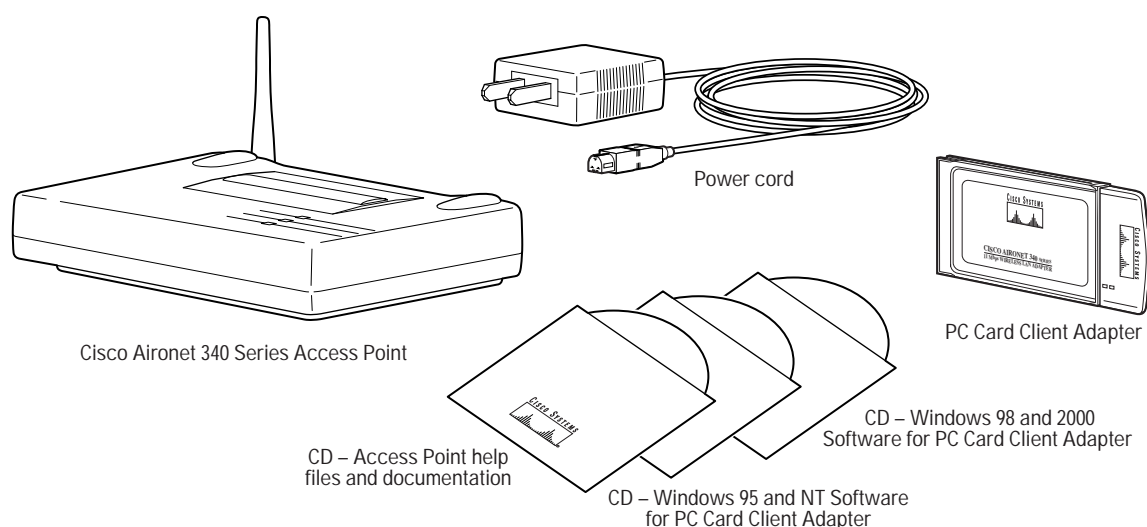


Figure 1-1 Cisco Aironet 340 Series Access Point and PC Card Client Adapter

Unpack your Cisco Aironet 340 Series Access Point and PC Card Client Adapter kit. You should have all of the above items. If any items are missing, call 800-553-2447 (outside USA, call 408-526-7209).

## Prepare

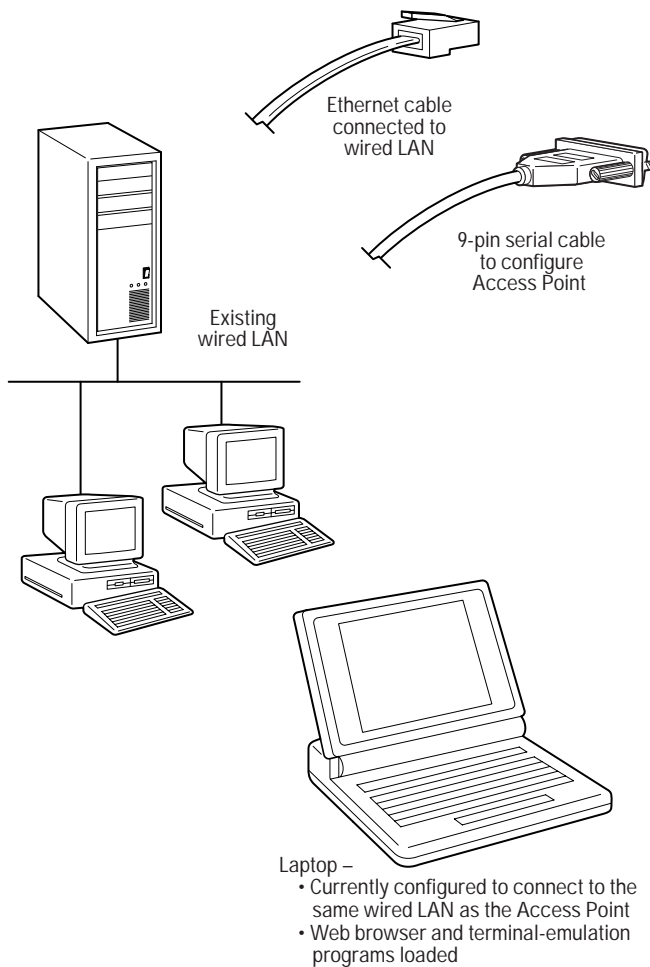

CHECKLIST	
<input type="checkbox"/>	SSID - Case-sensitive service set identifier for your wireless LAN: <hr/> (Example: tsunami)
<input type="checkbox"/>	Your laptop's client name: <hr/> (Example: AP340PF)
<input type="checkbox"/>	Username and password for your network account: <hr/> (Example: Patrick, Pat1492)
<input type="checkbox"/>	Your computer name and workgroup name for Microsoft Windows networking: <hr/> (Example: Pat Laptop, Cisco 1)
If you are not connected to a DHCP server:	
<input type="checkbox"/>	Unique IP address for Access Point: <hr/> (Example: 172.18.4.2)
<input type="checkbox"/>	Default gateway address: <hr/> (Example: 85.13.67.5)
<input type="checkbox"/>	Subnet mask: <hr/> (Example: 255.255.255.0)
If you are using a Windows NT system:	
<input type="checkbox"/>	Available IRQ number (interrupt address): <hr/> (Example: 11)

Checklist – Information from your Network System Administrator

Figure 1-2 Necessary Equipment and Network Information

Make sure you have all the necessary equipment and information required to set up your wireless network.

We recommend using Microsoft Internet Explorer or Netscape Navigator, versions 4.0 or later, as your Web browser. We recommend using HyperTerminal as your terminal-emulation program.

**Note:** If your laptop is not currently configured to connect to a wired LAN, contact your Network System Administrator for configuration assistance.

## Read

It is a good idea to read through all of the instructions in this section before you begin installation and operation of the Cisco Aironet 340 Series Access Point and PC Card Client Adapter.

# Set Up the Access Point

## Connect and Power Up

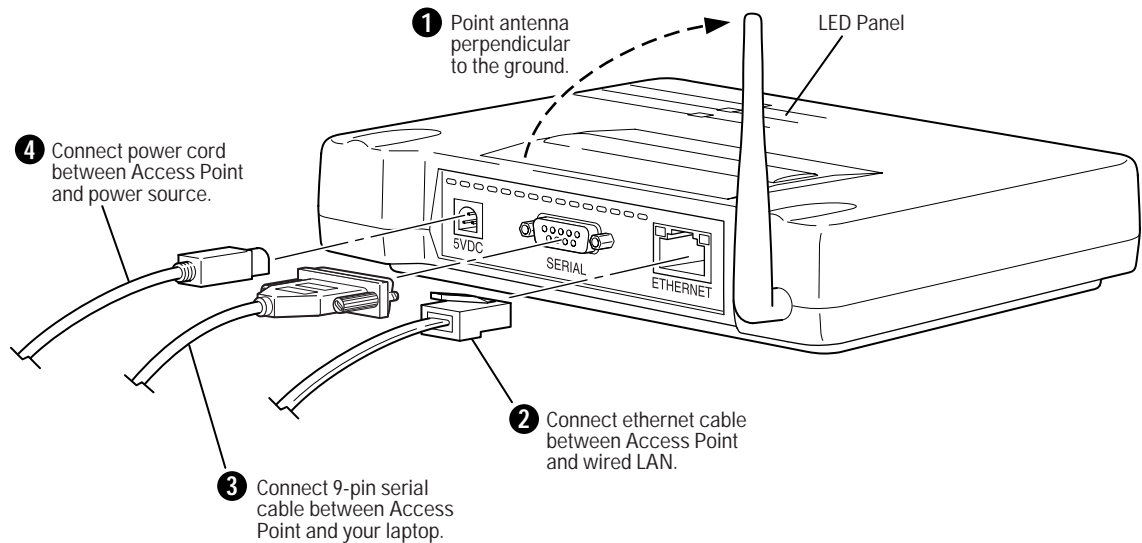


Figure 1-3 Steps to Connect and Power Up the Access Point

At start-up, all three LEDs on the top of the Access Point slowly blink amber, red, and then green in sequence; the sequence takes a few minutes to complete. During normal operation, the LEDs blink green. Refer to the user guide on the Access Point help files and documentation CD for LED descriptions.

## Configure

To configure the Access Point to work with your wired LAN, you must assign an IP address and an SSID (Radio Service Set Identifier) to the Access Point. An SSID is a unique identifier (similar to a password) that must be used in order for devices like your PC Card Client Adapter to be able to communicate with the Access Point. The SSID can be any alphanumeric entry up to a maximum of 32 characters.

### Assign an IP address and SSID

- Step 1. Open a terminal-emulation program on your laptop. The following instructions describe HyperTerminal; other terminal-emulation programs are similar.
- Step 2. In the Connection Description window: type a name (for example, AP340), select an icon for the connection, and click **OK**.
- Step 3. In the Connect Using pull down menu, select the port to which the cable is connected (for example, Direct to COM1) and click **OK**.

Step 4. In the Port Settings window choose the following settings from the pull down menus: **9600** baud, **8** data bits, **No** parity, **1** stop bit, and **Xon/Xoff** flow control. Click **OK**.



Figure 1-4 Port Settings Window

Step 5. Press **Enter**. The Express Setup screen opens and displays system information.

**Note:** If you do not see the complete Express Setup screen, press **Control/R** to refresh the screen or the equal sign (=) to open the correct screen.

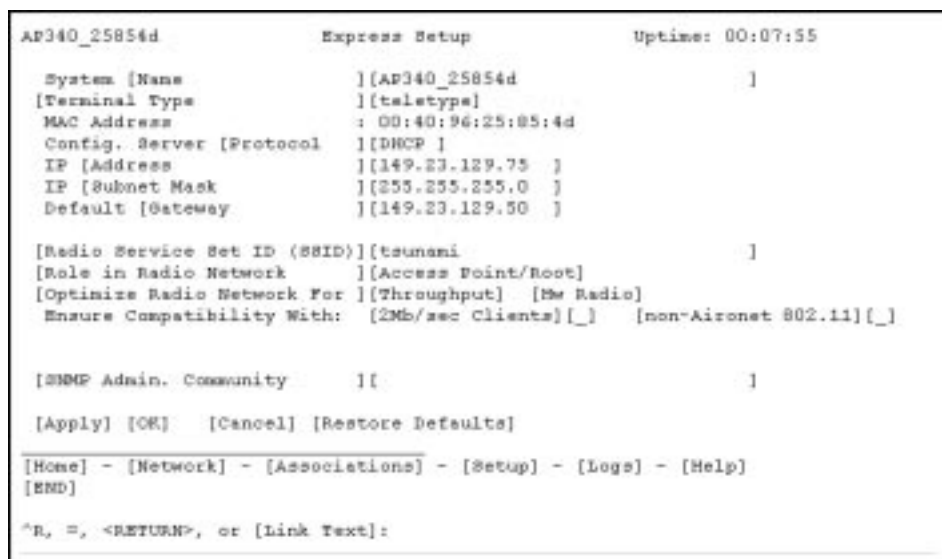


Figure 1-5 Express Set Up Screen

**Note:** In the following steps, you do not type the complete word because the system reacts at the first unique letter (for example, *ad* for address).

- Step 6. If your wired LAN uses a DHCP server, the Access Point's IP address will be assigned automatically every time the Access Point is turned on. Write down the IP address and skip to Step 13.
- Step 7. If your LAN does not use a DHCP server, type **ad** for IP address at the bottom of the Express Setup screen and press **Enter**.
- Step 8. From the checklist on page 1-2, type the IP address and press **Enter**.
- Step 9. Type **ga** for gateway address and press **Enter**.
- Step 10. From the checklist on page 1-2, type the default gateway address and press **Enter**.
- Step 11. Type **su** for subnet mask and press **Enter**.
- Step 12. From the checklist on page 1-2, type the subnet mask and press **Enter**.
- Step 13. Type **ra** for radio SSID and press **Enter**.
- Step 14. From the checklist on page 1-2, type the SSID and press **Enter**.
- Step 15. Type **ap** and press **Enter** to apply.
- Step 16. Exit the terminal-emulation program and remove the 9-pin serial cable.

You have now completed the required steps to install and configure your Access Point. Use the following steps to set up the PC Card Client Adapter.

## Set Up the PC Card Client Adapter

### Install



**CAUTION:** The following procedures and physical connections apply generally to normal and conventional PC card slots. In cases of custom or non-conventional equipment, be alert to possible differences in PC Card Client Adapter slot configurations.

- Step 1. Examine your PC Card Client Adapter. The card is keyed so that it can be inserted only one way into the PC card slot. One end is a dual-row, 68-pin PC card connector. The other end is a wireless antenna. The slot in your laptop must be a PC card Type II slot (this includes slots that support both the Type II and Type III cards). Remove any other PC card from the slot.
- Step 2. For Windows 95 or Windows 98 systems, turn the computer **on** before inserting the PC Card Client Adapter. For Windows NT systems, turn the computer **off** before inserting the PC Card Client Adapter.
- Step 3. Hold the PC Card Client Adapter with the logo facing up and insert the card into the slot, applying just enough pressure to make sure it is fully seated.



**CAUTION:** Never force the PC Card Client Adapter into the PC card slot. Forcing it will damage both the PC Card Client Adapter and the slot. If the PC Card Client Adapter does not easily insert, remove the card and re-insert it.

## Configure

Instructions for configuring your PC Card Client Adapter and installing the necessary drivers differ by operating system. Use instructions that match the operating system of your laptop—either with Windows 98/2000, Windows 95 or Windows NT.

**Note:** If your laptop does not have a CD-ROM drive, call the Technical Assistance Center at 800-553-2447 (outside USA, call 408-526-7209). Ask the representative for assistance in locating the drivers for your system and the Access Point Help files.

### Windows 98 Systems

**Note:** The Windows 98 driver also works with Windows 2000 operating systems.

After you have installed the PC Card Client Adapter, the system automatically detects it, opens a New Hardware Found window, and starts collecting information for a driver database.

- Step 1. When the Add New Hardware Wizard dialog box opens, it is searching for new drivers. Click **Next**.
- Step 2. From the next dialog box, select **Search for the best driver for your device (Recommended)** and click **Next**.
- Step 3. Select **CD-ROM drive**, deselect all other options, insert the PC Card Client Adapter CD for Windows 98, and click **Next**.
- Step 4. The hardware wizard will find the installation files on the CD and display the search results. When the PC Card Client Adapter driver is displayed, click **Next** to copy the required files.
- Step 5. During driver installation, you may be prompted to enter a path to the required client adapter or Windows 98 files:
  - Windows 98 files installed on your laptop are usually located in the folder C:\Windows\Options\Cabs. Click **OK** to install.
  - If the system prompts you for the Windows CD and the CD-ROM drive on your laptop is drive D, the path should be D:\WIN98. Click **OK** to copy the required files.
- Step 6. The Add New Hardware Wizard window opens again indicating the installation is complete. Click **Finish**.
- Step 7. Remove the CD and restart your laptop.
- Step 8. When the computer restarts, double-click **My Computer**, **Control Panel**, and **Network**.
- Step 9. Select the PC Card Client Adapter and click **Properties**.
- Step 10. In the Properties window, click **Advanced**.
- Step 11. In the Advanced window, select **Client Name**. From the checklist on page 1-2, type your laptop's client name in the Value dialog box.
- Step 12. Select **SSID**. Type your Access Point's (case-sensitive) SSID in the Value dialog box. Click **OK**.
- Step 13. If you are not connected to a DHCP server, double-click **My Computer**, **Control Panel**, and **Network**. Click the **Protocols** tab and select **TCP/IP** and **Properties**. Select **Specify an IP address** and type the IP address, subnet mask, and default gateway address of your laptop. Click **OK**.
- Step 14. In the Network window, click **OK**.
- Step 15. When prompted, click **Yes** to reboot your laptop.

## Windows 95 Systems


After you have installed the PC Card Client Adapter, the system automatically detects it, opens a New Hardware Found window, and starts collecting information for a driver database.

- Step 1. The Update Device Driver Wizard dialog box opens and indicates that Windows will complete the installation of the PC Card Client Adapter.
- Step 2. Insert the PC Card Client Adapter CD for Windows 95 and NT, and click **Next**.
- Step 3. When the Update Device Driver Wizard indicates that it is unable to locate a driver, click **Other Locations**.
- Step 4. In the Select other Location window, click **Browse**.
- Step 5. Select the CD-ROM drive and click **OK**.
- Step 6. In the Select other Location window, click **OK**.
- Step 7. When the Update Device Driver Wizard indicates that it has found the driver, click **Finish**.
- Step 8. When prompted to insert the Windows CD-ROM, click **OK**.
  - a) If Windows 95 prompts for files installed on your laptop (located at C:\Windows\Options\Cabs), type this path in the **Copy files from** dialog box and click **OK**.
  - b) If Windows 95 prompts for the Windows CD and the CD-ROM drive on your laptop is drive D, the path should be D:\WIN95. Click **OK** to copy the required files.
- Step 9. In the Systems Settings Change window, you are prompted to restart the computer. Remove CD and click **Yes**.
- Step 10. When the laptop has restarted, double-click **My Computer**, **Control Panel**, and **Network**.
- Step 11. Select the PC Card Client Adapter and click **Properties**.
- Step 12. In the Properties window, click **Advanced**.
- Step 13. In the Advanced window, select **Client Name**. From the checklist on page 1-2, type your laptop's client name in the Value dialog box.
- Step 14. Select **SSID**. Type your Access Point's (case-sensitive) SSID in the Value dialog box. Click **OK**.
- Step 15. In the Network window, click **OK**.
- Step 16. If you are not connected to a DHCP server, double-click **My Computer**, **Control Panel**, and **Network**. Click the **Protocols** tab and select **TCP/IP** and **Properties**. Select **Specify an IP address** and type the IP address, subnet mask, and default gateway address of your laptop. Click **OK**.
- Step 17. When prompted, click **Yes** to reboot your laptop.

## Windows NT Systems

**Note:** With Windows NT, install the PC Card Client Adapter with the computer **off**.

- Step 1. Turn the laptop on and wait for Windows NT to fully start. On your computer desktop, double-click **My Computer**, **Control Panel** and **Devices**. Scroll down and select PC Card Client Adapter. Click **Start up**, select **Automatic**, and click **OK**.
- Step 2. Insert the PC Card Client Adapter CD for Windows 95 and Windows NT into your CD-ROM drive.
- Step 3. Double-click **My Computer**, **Control Panel** and **Network**.
- Step 4. Click the **Adapter** tab and select **Add**.
- Step 5. In the Select Network Adapter window, click **Have Disk**.
- Step 6. In the **Copy files from** box, type the letter of your CD-ROM drive (for example: **D:\**) and click **OK**.
- Step 7. In the Select OEM option box, select the **PC Card Client Adapter** option and click **OK**.
- Step 8. From the Adapter Setup window, select **Client Name** and type your computer's unique name in the Value dialog box.

- 
- Step 9. Select **SSID**. Type your Access Point's (case-sensitive) SSID in the Value dialog box.
- Step 10. Select the IRQ number obtained from your system administrator.
- Step 11. Click **OK** and then **Close**.
- Step 12. The TCP/IP Properties windows should open. If not, double-click **My Computer**, **Control Panel** and **Network**. Select **Protocols > TCP/IP > Properties**.
- If you are connected to a DHCP server, select **Obtain an IP address from a DHCP server**.
  - If you are not connected to a DHCP server, select **Specify an IP address** and type the IP Address, Subnet Mask and Default Gateway address of your laptop. Click **OK**.
- Step 13. When prompted to shutdown and restart your computer, remove the CD and click **Yes**.

## Install the Help System

The Help System allows you to click the Help button on any of your Access Point's Web pages and access an HTML online help document explaining the features and functions of that Web page. The Help System files are provided on the supplied CD-ROM. To install the Help System, follow these steps:

- Step 1. Open your Web browser. We recommend using Microsoft Internet Explorer or Netscape Navigator, versions 4.0 or later.
- Step 2. Type the Access Point's IP address from the previous section in the browser address line and press **Enter**.
- Step 3. Click the **Setup** button to access the Setup Web page.
- Step 4. Click the **Web Server** link in the Services section to access the Web Server Setup Web page.
- Step 5. Place your cursor in the **Default Help Root URL** box. (This entry tells the system where to find the help files.)
- Step 6. Type the path to your CD-ROM drive and the help files (for example, if your CD-ROM drive is D:, then type file:///D:/Aironet/Help)

**Note:** You may choose to copy the Help files to your hard drive or file server. You would then need to edit the path accordingly.

- Step 7. Click **Apply**.

## Install Utilities

Install the Aironet Client Utilities (ACU), Link Status Meter (LSM), and Client Encryption Manager (CEM) utilities. Installing utilities is optional unless your network uses Wired Equivalent Privacy (WEP). If WEP is enabled, all devices in the network must have the same WEP code, which you set using the CEM utility. The ACU and LSM utilities provide troubleshooting and status information, but are not required.

**Note:** Refer to Using the Cisco Aironet 340 Series PC Card Client Adapters on the PC Card Client Adapter CD for specific instructions on how to use each utility.

- Step 1. Insert the CD for your operating system into your CD-ROM drive.
- Step 2. Select **Start > Run** and type the following path (where D is the letter for your CD-ROM drive):  
**D:\utils\setup.exe**
- Step 3. Follow the set up instructions on the screen to complete the installation.

**Note:** Contact your IS department if you have a problem connecting to the network.

# Test

To test that your Access Point and PC Card Client Adapter are properly configured, follow these steps:

- Step 1. Open your Web browser. We recommend using Microsoft Internet Explorer or Netscape Navigator, versions 4.0 or later.
- Step 2. Type the Access Point IP address from the previous section in the browser address line and press **Enter**. Depending on the method used to assign the IP address, either the Summary Status Web page or the Express Setup Web page opens.



Figure 1-6 Summary Status and Express Setup Web Pages

Congratulations! You have now created a wireless LAN using Cisco Aironet 340 Series Access Point and PC Card Client Adapter.

# Cisco Aironet 340 Series Product Features/Specifications

## Cisco Aironet 340 Series Access Points and PC Card Client Adapters

The Cisco Aironet 340 Series is a comprehensive family of PC Card Client Adapters and Access Points that enables organizations to integrate the freedom and flexibility of wireless local-area networking into their information systems.

### Main Features

- 11 Mbps Performance
- Security equivalent to wired networks
- Wireless freedom and flexibility
- IEEE 802.11b interoperability

The Cisco Aironet 340 Series PC Card Client Adapters and Access Points are designed to meet the mobility, performance, security, interoperability/management, and reliability requirements of in-building wireless local-area networks (WLANs) within enterprise-wide information infrastructures or as free-standing, all-wireless networks. The Cisco Aironet 340 Series products provide value-added features that are ideal for:

- IT professionals or business executives who want mobility within the enterprise, as an addition or alternative to wired networks
- Business owners or IT directors who need flexibility for frequent LAN wiring changes, either throughout the site or in selected areas
- Any company whose site is not conducive to LAN wiring because of building or budget limitations, such as older buildings, leased space, or temporary site

The Cisco Aironet 340 Series includes a complete line of client adapters, including PC Card Client Adapter, Personal Computer Interface (PCI), and Industry-Standard Architecture (ISA) cards for both notebook and desktop wireless connectivity. Cisco Aironet 340 Series Access Points offer unprecedented management features, including a full-featured Web interface to simplify the navigation of the network, and a variety of antenna options to fit virtually any environment.

Based on direct sequence spread spectrum (DSSS) technology and operating in the 2.4 GHz band, the Cisco Aironet 340 Series provides an Ethernet-like data rate of up to 11 megabits per second (Mbps). The high speed and throughput of the Cisco Aironet 340 Series enables the wireless transfer of bandwidth-intensive data such as multimedia streams and large data files within the enterprise.

Understanding the security requirements of both small businesses and the enterprise, Cisco provides up to 128-bit Wired Equivalent Privacy (WEP), an optional security mechanism defined within the IEEE 802.11 standard that makes the link integrity of the wireless medium equal to that of a cable. WEP is integrated with standard authentication features providing a level of data security equal to traditional wired LANs.

For investment protection, the Cisco Aironet 340 Series conforms to the IEEE 802.11b standard, ensuring interoperability with equipment available from a variety of vendors. The Cisco Aironet 340 Series is fully compatible with most popular network operating systems and delivers both Simple Network Management Protocol (SNMP) and Web-based management features. The Cisco Aironet 340 Series can be seamlessly integrated into wired Ethernet networks, as a complement or alternative to the best-of-class wired LAN products offered by Cisco Systems.

Table 2-1 Cisco Aironet 340 Series Specifications


Data Rates Supported	1, 2, 5.5 and 11 Mbps
Network Standard	IEEE 802.11b
Frequency Band	2400-2483.4 MHz
Wireless Medium	Direct Sequence Spread Spectrum (DSSS)
Media Access Protocol	Carrier sense multiple access with collision avoidance (CSMA/CA)
Network Operating Systems Supported	Microsoft Windows 2000, 98, 95 NT, and CE
Modulation	DBPSK@ 1 Mbps DQPSK@ 2 Mbps CCK @ 5.5 and 11 Mbps
Operating Channels	11 channels (U.S., Canada, and Japan); 13 channels (ETSI)
Non-Overlapping Channels	Three
Roaming	IEEE 802.11b compliant with Cisco enhanced roaming features
Warranty	One year: Access Points Lifetime limited: Client Adapters

## Cisco Aironet 340 Series PC Card Client Adapters

### Main Features

- High speed
- Excellent price/performance
- Full-featured utilities and robust management
- Secure transmission
- Long range
- Fully compliant with 802.11b standard
- Field-proven reliability

Cisco Aironet 340 Series PC Card Client Adapters couple the mobility, freedom, and flexibility of wireless local-area networking with the bandwidth required by enterprise-wide information systems. With wireless-enabled client PCs, users with laptop, notebook, and hand-held devices can move freely within a campus



environment while maintaining uninterrupted access to centrally located data. With wireless PCI and ISA Adapters, desktop PCs can be quickly added to a LAN without expensive, time-consuming, and often impractical cable runs and drops. With wireless, as an organization grows, reorganizes, or even changes location, clients can be quickly relocated without a loss of productivity.

Now with 11 Mbps of bandwidth, the benefits of wireless do not come at the expense of the data rate and throughput required by data-intensive applications. With the Cisco Aironet PC Card Client Adapters, users don't sacrifice anything; they experience the network performance they have come to expect - without the constraints and inflexibility of a wired connection.

All Cisco Aironet 340 Series PC Card Client Adapters feature antennas that provide the range and reliability required for data transmission and reception in larger indoor facilities. The internal dual diversity antennas of the PC Card Client Adapter automatically toggle to select the antenna receiving the strongest signal as the user moves within a facility. The fixed, integrated antenna is rugged enough to withstand the rigors of mobile computing and compact enough to stay out of the way, extending only an inch outside the PC card slot. The external antenna, standard with the PCI and ISA Adapters, is optimized for transmission from a stationary system and fits neatly behind the PC.

Up to 128-bit wired equivalent privacy (WEP) encryption security is available to provide data security that is comparable to traditional wired LANs. Cisco includes a complete set of device drivers to make installation trouble-free in a full range of systems. Easy-to-use site survey tools produce graphical information, including signal strength. To further facilitate installation, Cisco provides a suite of integrated utilities for Windows-based configuration, management, and diagnostics.

## Cisco Aironet 340 Series Access Points

### Main Features

- Manageability
- Easy integration and configuration
- Multiple configuration options
- Fully compliant with 802.11b standard

Cisco Aironet 340 Series Access Points perform functions similar to a hub in a wired network; in addition, they add the vital price/performance benefits of security, management features and mobility services. For example, the innovative roaming functionality provided by Cisco Aironet Access Points enable users equipped with wireless PC Card Client Adapters to freely move throughout a facility while maintaining seamless, uninterrupted access to the network. The Cisco Aironet 340 family of Access Points features easy integration to a wired network backbone, flexible configuration, management capabilities and a wide range of product configurations.

The Cisco Aironet 340 Series Access Points integrate easily into 10- and 100-Mbps Ethernet networks via a single autosensing RJ-45 port. The Access Point acts as a bridge, forwarding at media speed between the Ethernet CSMA/CD protocol and the wireless CSMA/CA protocol, seamlessly integrating wireless functionality into a wired infrastructure. The Cisco Aironet 340 Series Access Points may be configured locally via serial port or remotely over the LAN; they provide the option of a Web browser or console management interface.

The Cisco Aironet 340 Series management system offers IS professionals complete control over Access Point settings and operational information. Setting security levels, addresses, transmission channels, data rates and other options can be done quickly through either management interface. The management system captures vital operational data that may be viewed as an event log within the management system or exported to a Management Information Base (MIB) for analysis by an SNMP-compliant system.

Every in-building wireless deployment presents different transmission considerations: varying building sizes, construction materials and interior divisions impact the deployment of a wireless LAN. To ensure maximum network coverage efficiency in a variety of information systems and facilities, Cisco offers Access Points with three distinct antenna configurations. For small to medium-sized businesses and similar organizations, Cisco provides an Access Point with a single, integrated external antenna that combines needed features with more stringent budget requirements. For larger organizations, Cisco provides Access Points with integrated, dual-diversity external antennas that address the multipath problems associated with larger facilities. Finally, for the most challenging installations, Cisco provides Access Points with dual reverse-polarity TNC connectors. These connectors allow the planner to select from more than 20 different omnidirectional, patch, yagi and parabolic antennas to engineer the coverage needed within almost any facility. To meet the security needs of organizations around the world, Access Points are available with up to WEP-128 encryption.



Table 2-2 Cisco Aironet 340 Series Access Point Specifications

Feature	AIR-AP341S1C	AIR-AP342E2C	AIR-AP341E2C	AIR-AP342E2R	AIR-AP341E2R
Encryption	40-bit WEP	128-bit WEP	40-bit WEP	128-bit WEP	40-bit WEP
Power Requirements	110-120V/220-240V	110-120V	110-120V/220-240V	110-120V	110-120V/220-240V
Antenna	Integrated single 2.2 dBi dipole (no antenna diversity)	Integrated (nonremovable) dual 2.2 dBi dipole with diversity support		Optional (none supplied with unit)	
Optional Antenna Connector	None			Dual RP-TNC connectors with diversity support	
Maximum Clients	10	2048			
Range at 1 Mbps (typical)	1300 ft. (400m) open environment; 250 ft (77m) office			1500 ft. (460m) open environment; 300 ft (90m) office	
Range at 11 Mbps (typical)	300 ft. (90m) open environment; 80 ft (25m) office			400 ft. (120m) open environment; 100 ft (30m) office	
Network Protocols Supported	Complies with IEEE 802.3				
LED Indicators	Status, network activity and RF Activity				
Local Configuration	Direct console port (serial EIA-232 DB-9 female)				
Remote Configuration	HTTP, Telnet, FTP, or SNMP				
Automatic Configuration	BOOTP and DHCP				
Receive Sensitivity	-90dBm @ 1 Mbps, -88dBm @ 2 Mbps, -87dBm @ 5.5 Mbps, -83dBm @ 11 Mbps				
Output Power	30 mW (U.S., Canada, ETSI) 4.5 mW/MHz (EIRP, Japan)				
Power Consumption	5V±5% @ 800 mA				
SNMP Compliance	MIB I, MIB II				
Certifications	FCC Class A, FCC Part 15.247, Canada ICES Class B, CE, UL, CSA; Call for other information outside the U.S.				
Operating Temperature	32° to 131° F (0 to 55° C)				
Humidity (non-condensing)	10 to 90%				
Dimensions	6.3 x 4.72 x 1.45 in. (16 x 12 x 3.68 cm)				
Weight	12.3 oz. (350g), excluding power supply				

# Glossary

**DSSS**

A type of spread spectrum radio transmission that spreads its signal continuously over a wide frequency band.

**Long range**

A linear measure of the distance that a transmitter can send a signal.

**Bandwith**

Specifies the amount of the frequency spectrum that is usable for data transfer; it identifies the maximum data rate that a signal can attain on the medium without encountering significant loss of power.

**Dual diversity antennas**

An intelligent system of two antennas that continually senses incoming radio signals and automatically selects the antenna best positioned to receive it.

**Multi-path**

The echoes created as a radio signal bounces off physical objects.

**Dual reverse-polarity**

Connector types unique to Cisco Aironet radios and antennas. Part 15.203 of the FCC rules covering spread-spectrum devices limits the types of antennas that may be used with transmission equipment. In compliance with this rule, Cisco Aironet radios and antennas are equipped with unique connectors to prevent attachment of nonapproved antennas to radios.

# Background

## Cisco and Aironet History

Aironet was incorporated in 1993 as an independently run subsidiary of Telxon Corporation, an early leader in the hand-held data collection market. Our technology and intellectual property roots date back to 1986 with the founding of Telesystems, a pioneer in wireless LAN technology. Telxon acquired Telesystems in 1992, which shortly thereafter became the foundation for Aironet. In August of 1999, Aironet became a publicly traded company with a successful initial public offering. In March of 2000, Aironet was acquired by Cisco Systems.

Today Cisco is a leading provider of high-speed, standards-based WLAN solutions. We are a major contributor to the industry's development of the IEEE 802.11b wireless LAN standard and the first company to bring a full range of 802.11-compliant, high-speed 11 Mbps products to market. Our products are marketed worldwide through distributors, value-added resellers (VARs) and OEM partners.

## Introduction to Wireless LANs

The wireless LAN market emerged in the mid-1980s when real-time data collection and inventory management became business necessities. Retailers needed to know instantly what was selling—or not selling—on their shelves. Industries needed to manage inventory “just in time” for manufacturing to fill actual orders. And everyone was demanding “electronic data interchange.”

Early wireless portable systems were based on narrow-band UHF in the 450-470 MHz frequency band. In some countries, including the United States, radio-based installations require local site licenses from government agencies. In 1985 the FCC authorized unlicensed usage of spread spectrum radios in the Industrial, Scientific and Medical (ISM) bands, including 902-928 MHz, 2.400-2.4835 GHz and 5.725-5.875 GHz.

Three years later, the first FCC-certified 900-MHz spread-spectrum radio for wireless systems was introduced by Telesystems SLW Inc. of Markham, Ontario (acquired by Telxon, Aironet's founding company, in 1992 via a stock acquisition following several years of joint product ventures). This early 900-MHz, spread-spectrum radio delivered the higher data rates needed for “real-time” data collection and was soon integrated into a wide array of devices serving retail and manufacturing applications.

In 1994 wireless LAN communications took another leap forward. Due to advances in RF technology, radio components were getting smaller, faster, and cheaper. Now the wireless industry could reasonably produce 2.4 GHz spread-spectrum radios capable of sustaining 1 or 2 Megabits per second (Mbps), more than twice the speed of 900 MHz devices.

Besides faster data transmissions, 2.4 GHz radios offer an even bigger advantage—unlike 900 MHz, the 2.4 GHz is unlicensed and available in most of the world. Because of this worldwide acceptance, the Institute of Electrical and Electronics Engineers (IEEE) Standards Activity Board 802.11 committee designated 2.4 GHz as the RF band for emerging standards for wireless LAN specifications.

In June 1997 the IEEE Standards Activity Board approved the 802.11 wireless LAN standard. This long-awaited standard will allow mobile wireless LAN components, from different manufacturers that are 802.11 compliant, to be used with the same wireless infrastructure. More and more 802.11-compliant products are coming onto the market. The entire industry is now focusing on the implementation of IEEE 802.11 wireless networks, conformance testing, and proving interoperability between multiple vendors.

As a champion for industry standards, Cisco intends to fully participate in all pertinent conformance and interoperability testing of wireless LAN products. In April of 2000, Cisco was in the first group of wireless LAN vendors to be awarded the wi-fi™ certification of inter-operability for IEEE 802.11b products by the Wireless Ethernet Compatibility Association (WECA). WECA was founded in 1999 to certify inter-operability of IEEE 802.11b wireless LAN products.

## Real-world throughput vs. idealistic data rates

When comparing the performance of communications systems, it's important to make sure the systems are on a level playing field. Two terms in particular can lead to a lopsided understanding of system speed—"data rate" and "throughput."

*Data rate* in communications systems is not a measure of speed. The raw data rate actually describes the capacity of a system—the size of the pipe.

*Throughput* describes how much useful data is transferred through a system in a given period of time, and is a better measure of the actual speed of a system.

Throughput will always be less than the raw data rate. The difference between the two measures is due to protocol overhead and transmission errors. The real data that you want to send over the network is encapsulated in packets that contain addressing and other protocol control information. Each protocol layer adds its own protocol functions, and therefore its own overhead.

In a world dominated by the Internet, everyone uses the TCP/IP protocol stack. Therefore, a reasonable real-world test of the "speed" of a network is to measure a file transfer time over a network using FTP, the File Transfer Protocol. Cisco bases most network performance comparisons on FTP file transfers. There are at least five levels of protocol overhead involved in that transfer: the FTP protocol, the UDP protocol, the IP protocol, the LLC protocol, and the MAC and PHY for the particular network. This is a good test for most users, but the results are always less than the throughput claims put forward by many marketing departments.

To avoid protocol overhead and show their network in a more favorable light, companies usually conduct very low-level tests of their products. The resulting marketing claim is usually based on transmitting frames directly over the MAC interface without any higher level protocols. This is more impressive than the FTP test, but still less than the raw data rate.

# Safety and Compliance

## Safety Information

The FCC with its action in ET Docket 96-8 has adopted a safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC certified equipment. Cisco Aironet 340 Series products meet the uncontrolled environmental limits found in OET-65 and ANSI C95.1, 1991. Proper operation of this radio according to the instructions found in this Reviewer's Guide will result in user exposure that is substantially below the FCC recommended limits.

- Do not touch or move antenna(s) while the unit is transmitting or receiving.
- Do not hold any component containing the radio such that the antenna is very close or touching any exposed parts of the body, especially the face or eyes, while transmitting.
- Do not operate a portable transmitter near unshielded blasting caps or in an explosive environment unless it is a type especially qualified for such use.
- Do not operate the radio or attempt to transmit data unless the antenna is connected; if not, the radio may be damaged.
- Antenna use:
  - Always orient a dipole antenna such that it is at least 6 inches (15 cm) away from your body.
  - High-gain, wall-mount or mast-mount antennas are designed to be professionally installed and should be located at a minimum distance of 12 inches (30 cm) or more from your body. Please contact your professional installer, VAR, or antenna manufacturer for proper installation requirements.
  - Warning for laptop users: In order to comply with the FCC RF exposure limits, it is recommended when using a laptop with a PC Card Client Adapter, that the adapter's integrated antenna should not be positioned closer than 2 inches (5 cm) from your body or nearby persons for extended periods of time while it is transmitting (or operating). If the antenna is positioned less than 2 inches (5 cm) from the user, it is recommended that the user limit exposure time.

## Compliance Information

### Federal Communication Commission Declaration of Conformity Statement

This device complies with Part 15 rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential environment. This equipment generates, uses, and radiates radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference. However, there is no guarantee that interference will not occur. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician.

### **Department of Communications—Canada Canadian Compliance Statement**

This class B Digital apparatus meets all the requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte les exigences du Règlement sur le matériel brouilleur du Canada.

This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions:

1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

The device is certified to the requirements of RSS-139-1 for 2.4 GHz spread spectrum devices. The use of this device in a system operating either partially or completely outdoors may require the user to obtain a license for the system according to the Canadian regulations. For further information, contact your local Industry Canada office.

### **European Telecommunications Standards Institute Statement of Compliance Information to User**

This equipment has been tested and found to comply with the European Telecommunications Standard ETS 300.328. This standard covers Wideband Data Transmission Systems referred to in CEPT recommendation T/R 10.01.

This type accepted equipment is designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

# Technical Support

If you need technical assistance with a Cisco Aironet product, contact our Technical Assistance Center:

**Phone:** 800-553-2447 (outside USA, call 408-526-7209)

**E-mail:** [tac@cisco.com](mailto:tac@cisco.com)

**Web:** <http://www.cisco.com>

**Service hours:** 24 hours a day

**Corporate Headquarters**

Cisco Systems, Inc.  
170 West Tasman Drive  
San Jose, CA 95134-1706  
USA  
<http://www.cisco.com>  
Tel: 408 526-4000  
800 553-NETS (6387)  
Fax: 408 526-4100

**European Headquarters**

Cisco Systems Europe  
11, Rue Camille Desmoulins  
92782 Issy Les Moulineaux  
Cedex 9  
France  
<http://www-europe.cisco.com>  
Tel: 33 1 58 04 60 00  
Fax: 33 1 58 04 61 00

**Americas Headquarters**

Cisco Systems, Inc.  
170 West Tasman Drive  
San Jose, CA 95134-1706  
USA  
<http://www.cisco.com>  
Tel: 408 526-7660  
Fax: 408 527-0883

**Asia Pacific Headquarters**

Cisco Systems Australia Pty., Ltd.  
Level 17, 99 Walker Street  
North Sydney  
NSW 2059 Australia  
Tel: 61 2 8448 7100  
Fax: 61 2 9957 4350

**Cisco Systems has more than 200 offices in the following countries. Addresses, phone numbers, and fax numbers are listed on the  
Cisco Connection Online Web site at <http://www.cisco.com/go/offices>.**

Argentina • Australia • Austria • Belgium • Brazil • Canada • Chile • China • Colombia • Costa Rica • Croatia • Czech Republic • Denmark • Dubai, UAE  
Finland • France • Germany • Greece • Hong Kong • Hungary • India • Indonesia • Ireland • Israel • Italy • Japan • Korea • Luxembourg • Malaysia  
Mexico • The Netherlands • New Zealand • Norway • Peru • Philippines • Poland • Portugal • Puerto Rico • Romania • Russia • Saudi Arabia • Singapore  
Slovakia • Slovenia • South Africa • Spain • Sweden • Switzerland • Taiwan • Thailand • Turkey • Ukraine • United Kingdom • United States • Venezuela

Copyright © 2000 Cisco Systems, Inc. All rights reserved. Printed in the USA. BPX, Catalyst, Cisco, Cisco IOS, Cisco Systems, and the Cisco Systems logo are registered trademarks of Cisco Systems, Inc. or its affiliates in the U.S. and certain other countries. All other trademarks mentioned in this document are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any of its resellers. (0005R) 07/00 BW6342